

# SUPERSTING™

## Wi-Fi



### THE PREMIER ELECTRICAL IMAGING SYSTEM

The SuperSting™ Wi-Fi is a next-generation electrical resistivity meter and induced polarization (IP), and self-potential (SP) system, used to scan and image the subsurface of the earth and visualize the results in 2D slices or 3D volumes.

It's the first in the industry capable of multiple channels.

#### VERSATILE IMAGING APPLICATIONS:

It's versatile enough to be applied in virtually any resistivity and induced polarization (IP) field situation, including:

- + Groundwater Exploration
- + Marine Targets
- + CO2 Sequestration Time-Lapse Monitoring
- + Dams & Levees
- + Marine Dredging
- + Caves, Sink Holes, & Subsidence
- + Vertical Walls
- + Inside Tunnels
- + Brownfield Remediation
- + Archaeology
- + Imaging Forensic Sites
- + Monitoring Landfills
- + Mine Leach Piles
- + Precious Metal Exploration
- + Industrial Mineral Exploration
- + Borehole-To-Borehole Tomography (ERT)

#### 5 MODELS, ALL FUTURE-PROOF

We continuously work to update the SuperSting™ with additional features to handle any field application.

All five models of the SuperSting™ Wi-Fi are weatherproof and can be easily upgraded from anywhere in the world by use of a license code.

- SUPERSTING™ WI-FI R1:** SINGLE CHANNEL
- SUPERSTING™ WI-FI R2:** TWO CHANNEL
- SUPERSTING™ WI-FI R4:** FOUR CHANNEL
- SUPERSTING™ WI-FI R6:** SIX CHANNEL
- SUPERSTING™ WI-FI R8:** EIGHT CHANNEL

#### CONTACT US


**Fad Smart Technology**  
Str. Olari Nr. 7 ap.5  
Bucuresti, Sector 2,  
07000 Romania

+40 745 326 544

#### CONTROL IN THE PALM OF YOUR HAND

Using Wi-Fi enabled Android™ 7" or 10" tablets or phones, you can simultaneously control the SuperSting™, check the electrodes for contact resistance, create command files, and review real-time data plots.

Using the app, you can also upload command files from the SuperSting™, download data directly from the instrument, and email data files directly to your office or processing center.

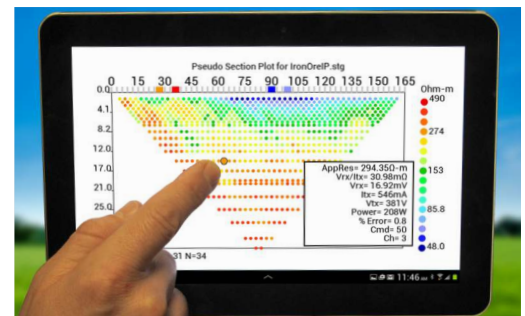

# SuperSting™ Wi-Fi Technical Specification

(Available as eight- or single- channel memory earth resistivity, SP & IP meter)

SUPERSTING™ WI-FI	
Item	Description
Measurement modes	Apparent resistivity, resistance, induced polarization (IP), SP & battery voltage.
Measurement range	+/- 5Vp-p.
Measuring resolution	Max 30 nV, depends on voltage level.
Screen resolution	4 digits in engineering notation.
Transmitter	200 W internal transmitter; external 5 kW, 10 kW and 15 kW transmitters are also available (see separate brochure for specifications).
Output current	1 – 2,000 mA continuous, measured to high accuracy.
Output voltage	800 Vp-p, actual electrode voltage depends on transmitted current & ground resistivity.
Input channels	Five models are available; 1 channel, 2 channel, 4 channel, 6 channel, and 8 channel.
Input gain ranging	Automatic, always uses full dynamic range of receiver.
Input impedance	>150 MΩ
SP compensation	Automatic cancellation of SP voltages during resistivity measurement. Constant & linearly varying SP cancels completely.
Type of IP measurement	Time domain chargeability (M), six time slots measured & stored in memory.
IP current transmission	ON+/OFF/ON-/OFF.
IP time cycles	0.5 s/1 s/2 s/4 s/8 s.
Measure cycles	Running average of measurement displayed after each cycle. Automatic cycle stop when reading errors fall below user-set limit or user-set max cycles are done.
Resistivity time cycles	Basic measure time is 0.2/0.4/0.8/1.2/3.6/7.2 or 14.4 s as selected by user via keyboard. Auto-ranging & commutation adds about 1.4 s.
Signal processing	Continuous averaging after each complete cycle. Noise errors calculated & displayed as percentage of reading. Reading displayed as resistance ( $\Delta V/I$ ) & apparent resistivity ( $\Omega m$ ). Apparent resistivity is calculated using user entered electrode array coordinates.
Noise suppression	Better than 100 dB at $f > 20$ Hz. Better than 120 dB at power line frequencies (16 2/3, 20, 50 and 60 Hz) for measurement cycles of 1.2 s & above.
Total accuracy	Better than 1% of reading in most cases (lab measurements). Field measurement accuracy depends on ground noise & resistivity. The instrument will calculate & display running estimate of measuring accuracy.
System calibration	Calibration is done digitally by the microprocessor based on correction values stored in memory.
Supported configurations	In manual mode; resistance, Schlumberger, Wenner, dipole-dipole, pole-dipole, pole-pole. In automatic mode; any configuration can be programmed.
Operating system	Stored in re-programmable flash memory. New version can be downloaded from the AGI web site & stored in the flash memory.
Data storage	Full resolution reading average & error are stored along with user entered coordinates & time of day for each measurement. Data is automatically stored in a job oriented file system.
Data display	Apparent resistivity ( $\Omega m$ ), current intensity (mA), & measured voltage (mV) are displayed & stored in memory for each measurement. Data can also be displayed on an Android device in real time as bright color pseudo sections, IP curves, transmitter/receiver plot, contact resistance measurements & more.
Memory capacity	Virtually unlimited data storage in real time on controlling Android device. The internal SuperSting memory can store more than 79,000 measurements (resistivity mode) & more than 26,000 measurements in combined resistivity/IP mode.
Data transmission	Data can be instantaneously transferred from the Android device by email or by file transfer from the Android device USB port. RS-232C channel available to dump data from the instrument to a Windows type computer on user command.
Automatic multi-electrodes	The SuperSting is designed to run dipole-dipole, pole-dipole, pole-pole, gradient, Wenner, Schlumberger or any other custom array including roll-along surveys completely automatically with the patented (Pat.# 6,404,203) Dual-Mode Automatic Multi-electrode system or a passive electrode cable system with Switch Box. The SuperSting can run any other electrode array by using user programmed command files. These are ASCII files that can be created using a regular text editor. The command files are uploaded to the SuperSting RAM memory & can at any time be recalled & run as a survey.
User controls	20 key tactile   weatherproof keyboard with numeric entry keys & function keys   On/off switch   Measure button, integrated within main keyboard   LCD night light switch (push to light)   Keyboard and LCD are mirrored to an Android device using Wi-Fi technology for easy remote control of the SuperSting.
Display	Graphics LCD display (16 lines x 30 characters) with nightlight. Optional Android mobile phone screen & 7" or 10" Android tablet bright color AMOLED display.
Power supply, field	12V or 2x12V DC external power, connector on front panel   Optional AC/DC power supply & motor generator.
Power supply, office	DC power supply.
Operating time	Depends on survey conditions & size of battery used. Internal circuitry in auto mode adjusts current to save energy.
Operating temperature	-5 to +50°C
Weight	10.9 kg (24 lb.)
Dimensions	Width 184 mm (7.25"); length 406 mm (16") & height 273 mm (10.75").

SUPERSTING™ MANAGER APP	
Item	Description
Tablet (Included)	Used with various Wi-Fi capable Android devices such as mobile phones, 7-inch & 10-inch tablets. Recommended for tablets; the App may not render properly on all handset devices.
Minimum Android version	Android 5.0 or above.
Functions	All functions performed using the SuperSting's keypad can be performed using the App's GUI with the exception of baud rate setting.
Real time quality assurance	Color pseudo section plot, transmitter/receiver pair plot, IP curve plot, contact resistance test results, real time data review.
Data storage	Data storage on Android devices is typically in Gigabyte range, meaning essentially unlimited storage space is available.
Data transfer	Data transfer by email or by file transfer from the Android device USB port.
Wi-Fi range	Up to 100 m, depending on terrain & atmospheric conditions.